AKAI

Operator's manual

MICRO MUSIC SYSTEM

QXA6710

Operator's manual **(GB) 28~35**

WARNINGS

To reduce the risk of fire or electric shock, do not expose This appliance to rain or moisture.

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

EXPLANATION OF GRAPHIC SYMBOLS

The lightning flash with arrowhead symbol, with in an equilateral triangle, is intended to alert user to the presence of uninsulated " dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and vaintenance (servicing) instruction in the lliterature accompanying the appliance.

HAZARD WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUIT LASER DE CLASSE 1

CAUTION
INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED。AVOID DIRECT IXPOSURE TO LASER BEAM

This product contains a low-power laser emitter.

PRECAUTIONS FOR USE

To ensure safe, appropriate use of your personal CD player, please follow the advice below:

Location
- Do not use the product in extremely hot, cold, dusty or damp conditions.
- Place the product on a smooth, flast surface.
- Ensure that air is free to circulate through the product. Do not use it in a poorly ventilated place, cover it with a cloth or place it on carpet.

Power supply voltage
- Before using the product, check that its rated voltage is suitable for your mains supply.

Safety precautions
- When you plug in or unplug the power cord, always hold the plug rather than the cable. Pulling the cord could damage it and create a hazard.
- Always unplug the product from the mains if you do not intend to use it for an extended period.
- The OFF position does not disconnect the product from the mains power supply. To disconnect the product from the power supply, you must unplug the power cord.
- This product should only be used in a horizontal position.

Condensation
- Water droplets or condensation may form inside the CD player if it is left in a warm, damp atmosphere.
- The product may not operate correctly if condensation forms inside it.
- Leave the product in a warm, dry room for 1 to 2 hours to allow the condensation **to evaporate.**

In the event of a problem, unplug the power cord and Contact a qualified repair technician.

Warning: Ventilation
Your personal CD player has ventilation holes, which should never be obstructed.

Liquid warning:
- Never allow liquids to splash or drip onto the product.
- Never place a liquid-filled container (e.g. vase, jar, etc.) above it.

Precautions :
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus
- The mains plug is used as the disconnect device and it shall remain readily operable. To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains.
- The apparatus will be use in open area
- The ventilation should not be impedde by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc
- No naked flame sources such as lighted candles should be placed on the apparatus;
- Attention should be drawn to the environmental aspects of battory disposal;
- The use of apparatus in moderate climates.
- The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like

1

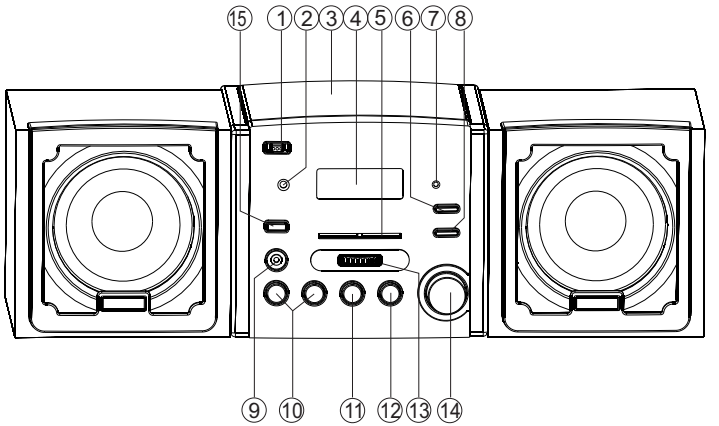

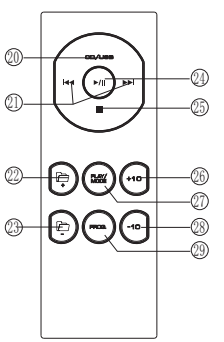

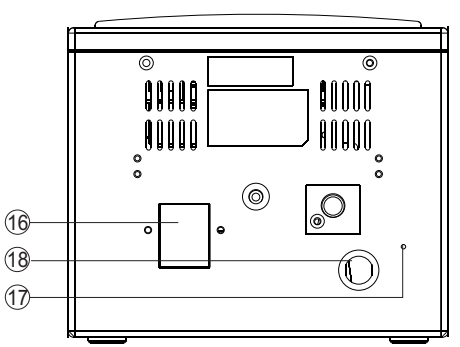

Top and front panels (See 1)

1. FUNCTION SELECTOR
- Select source of sound USB/CD, OFF, AM or FM,

2. REMOTE CONTROL SENSORE
- Receive the signal from the remote control.

3. CD DOOR
- Press here to open / close the CD door.

4. DISPLAY
- Show the CD functions.

5. DIAL POINTER WINDOW
- Show the AM/FM dial frequency.

6. CD/USB
Switch between USB and CD mode

7. FM STEREO INDICATOR
- Show the FM stereo indication.

8. PALY MODE
- Repeat, Repeat Album, Repeat All, Random

9. STEREO HEADPHONE JACK
- 3.5mm stereo headphone jack.

10. SKIP ⏮/◀◀ , ▶▶/⏭
CD/MP3: - skips track backwards or forward.

11. STOP/FOLDER
- Stop CD/MP3/USB playback / Folder +
- Delete program playback.

12. PRESS TO PLAY/PAUSE
- Start or pause CD/USB play.

13. TUNING CONTROL
- Select FM/ AM stations.

14. VOLUME
- Adjusts volume level.

15. USB INTERFACE
- USB input host.

Back Panel (See 1)

16. SPEAKER TERMINAL
- to connect the speaker wire.

17. AC MAINS
- Connect the AC power cord to the wall outlet.

18. FM ANTENNA
- To improve FM reception.

Remote Control Handset (See 1)

20. CD/USB
Switch either CD or USB mode

21. SKIP⏮/ ◀◀ , ▶▶/⏭
CD:- skips track backwards or forward.

22.
- Folder up (MP3 mode)

23.
- Folder down (MP3 mode)

24. PRESS TO PLAY/PAUSE
- starts or pauses CD play.

25. STOP ■
- stops CD playbacd; erases a CD program.

26. +10
- selects the CD tracks (+10).

27. PLAY/MODE ▶/II
- Repeat, Repeat 1, Random

28. -10
- selects the CD tracks (-10).

29. PROG
CD: - programs and reviews programmed track numbers.

Power Supply Using AC Power

1 . Check if the power voltage, as shown on the type plate located on the back of the set, corresponds to your local AC power supply. If it does not, consult your dealer or service centre

2 . Connect the power cord to the wall outlet. The power supply is now connected and ready for use.

3 . To switch off completely, unplug the power cord from the wall outlet.

- Unplug the power cord from the wall outlet to protect your set during heavy thunderstorms.
- If electric cable is damaged, it must be replaced by the manufacturer, or by the qualification persons, in order to avoid a danger.

BASIC FUNCTIONS

Switching power on/off: Save energy

To avoid unnecessary energy consumption always adjust the source selector to off position.

General operation

1 . To select your sound source adjust the source selector to **USB.CD/OFF/AM/FM**.
2 . Adjust the sound with the **VOLUME** controls.
3. To switch off the set, adjust the source selector to OFF position.

RADIO

Radio reception

1. Slide the **FUNCTION** selector to a desired setting - FM or AM.

2. Rotate the **TUNING** control to find the desired stations.

   NOTE: If you have tuned to an FM stereo station, the FM stereo LED indicator will light.

3. When you have finished listening, slide the **FUNCTION** selector to the OFF position to shut the power off.

USB PLAYBACK

1. Slide the function selector to USB.CD position.
2. Press the CD/USB button to switch USB mode (indicated in the LC dis-play).
3. Insert a USB memory stick into the USB port.
4. Display will show total track number
5. Press PLAY/PAUSE to start music playing
6. Press |◀◀ or ▶▶| to select tracks
7. Repeat function can be selected identical to CD/MP3 playback
8. Press STOP/FOLDER to end playback
9. Press STOP/FOLDER to select desired Album

Note: Due to fast changing IT technology, this unit may not be compatible with some USB storage device.

* USB support Specification: USB V1.1/V2.0

RADIO

– For **FM**, pull out the wired antenna. Incline and turn the antenna. Reduce its length if the signal is too strong (very close to a transmitter).
– For **AM** the set is provided with a built-in antenna so the telescopic antenna is not needed. Direct the antenna by turning the whole set.

CD/MP3 Player

Playing a CD

This CD-player can play Audio Discs, MP3, CD-R and CD-Rewritables. Do not try to play CD-ROM, CDi, VCD, DVD or computer CD.

1. Adjust the source selector to USB.CD.
   Display: shows - - - Briefly.
2. To open the CD door, press the CD door at the edge marked **OPEN/CLOSE**.
3. Insert a CD, CD-R or CD-RW with the printed side Facing up and press the CD door gently close.
4. Press ▶/II on the device or remote control to start playback.
5. To pause playback press ▶/II
   - To resume, press ▶/II again.

6 To stop CD playback, press ▶/II button.

Note: CD play will also stop when:
– you open the CD compartment;
– you select the function switch to OFF ;
– the CD has reached to the end.

Selecting a different track

During playback you can use ⏮
or ⏭ to select a particular track.

- If you have selected a track number in the stop or pause position, press ⏮ or ⏭ to start playback.
- Press once briefly for the next track, or press ⏭ repeatedly until the desired track number appears in the display.
- Press ⏮ once briefly to return to the beginning of a current track.
- Press ⏮ more than once briefly for a previous track.

Programming track numbers

You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.

1. In the **PROG** mode, press ⏮ or ⏭ for your desired track.
2. When your chosen track number appears, press **PROG** once to store the track.
   The display shows **prog** and prog briefly followed by your selected track number.
3. Repeat steps 1 to 2 to select and store all desired tracks in this way.
4. To play your program, press **PLAY/PAUSE** .

Reviewing your set program

- After playing at least one programmed track, press ⏮ or ⏭ , display will show your stored track numbers

.

Erasing a program

You can erase the contents of the memory by:
– opening the CD door;
– slide the function selector to OFF source;

Notice for CDR/CDRW/MP3 users:
Depending on the type of CD burner, on the disc brand, MP3 compression level and the burning speed, some reading problems may occur.

CD play mode :
–REPEAT 1 > REPEAT ALL > RANDOM > NORMAL
MP3 play mode :
–REPEAT 1 > REPEAT ALBUM > REPEAT ALL > RANDOM > NORMAL

MAINTENANCE & SAFETY

Precautions & General Maintenance

- Place the set on a hard and flat surface so that the system does not tilt.
- Do not expose the set, batteries or CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- Do not cover the set. Adequate ventilation with a minimum gap of 6 inches between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a soft dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

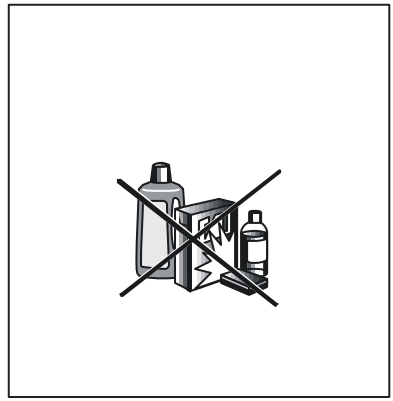

CD player and CD handling

- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation to form and the lens of your CD player to cloud over. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD door to keep the CD compartment dust-free. To clean, dust the compartment with a soft dry cloth.
- To clean the CD, wipe in a straight line from the centre towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

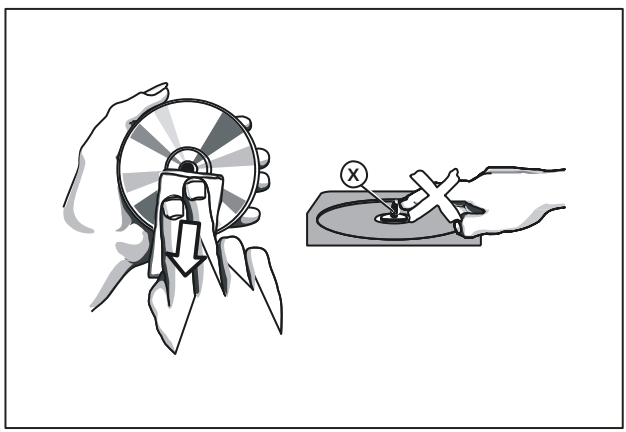

TROUBLESHOOTING

Troubleshooting
If a fault occurs, first check the points listed below before taking the set for repair.
Do not open the set as there is a risk of electric shock.
If you are unable to remedy a problem by following these hints, consult your dealer or service center.

WARNING: Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

– Problem
• Solution

No sound /power

–Volume not adjusted
•Adjust the VOLUME
–power cord not securely connected
•Connect the AC power cord properly
–Batteries dead/ incorrectly inserted
•Insert (fresh) batteries correctly

Display does not function properly / No reaction to operation of any of the controls

–Electrostatic discharge
•Switch off and unplug the set. Reconnect after a few seconds

USB no read
–No file
•To ensure your USB drive stored music file in Mp3 or wma format.
•Reset the device

no disc indication
–No CD inserted
•Insert a CD, CD-R or CD-RW
–CD badly scratched or dirty
•Replace/ clean CD, see Maintenance
–Laser lens steamed up
•Wait until lens has cleared
–CD-R is blank or the disc is not finalized
•Use a finalized CD-R

CD playback does not work
–CD badly scratched/ dirty
•Replace/ clean CD (see maintenance)
–Laser lens steamed up
•Wait until lens has adjusted to room temperature

The CD skips tracks
–CD damaged or dirty
•Replace or clean CD
–Program is active
•Quit Program mode(s)

Environmental information

We have done our best to reduce the packaging and make it easy to separate into 3 Materials: cardboard, paper pulp and expandable polyethylene.
Your set consists of materials which can be recycled if disassembled by a specialized compacts. Please observe the local regulations regarding the disposal of packaging, dead batteries and old equipment.

Specifications :

Power supply	: AC 230 V~ 50 Hz
Power consumption	: 17 Watts
Dimensions of unit	: 458(W) X 275 (H) X 153 (D) mm.
Weight (Main Unit & Speaker Box)	: 3.10 Kgs
Frequency range	: AM 540 - 1600 KHz. : FM 88 - 108 MHz.
AUDIO SECTION	: 1.5 W X 2
Output Power (RMS)	: 4 Ohms 5W
Speaker	

SPECIFICATION

Specification subjects to be changed without notice.

Recycling

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).
This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment.
For further information, please contact your local or regional authorities.
Electronic products not included in the selective sorting process are potentially dangerous for the environment and human heath due to the presence of hazardous substances.

Corrosion, oxidation, battery-leakage and any other gradually acidic defect of this nature will invalidate the guarantee.

For more information and warranty conditions, please visit : www.akai.eu